


ISTRUZIONI DI MONTAGGIO


INSTALLATION INSTRUCTIONS

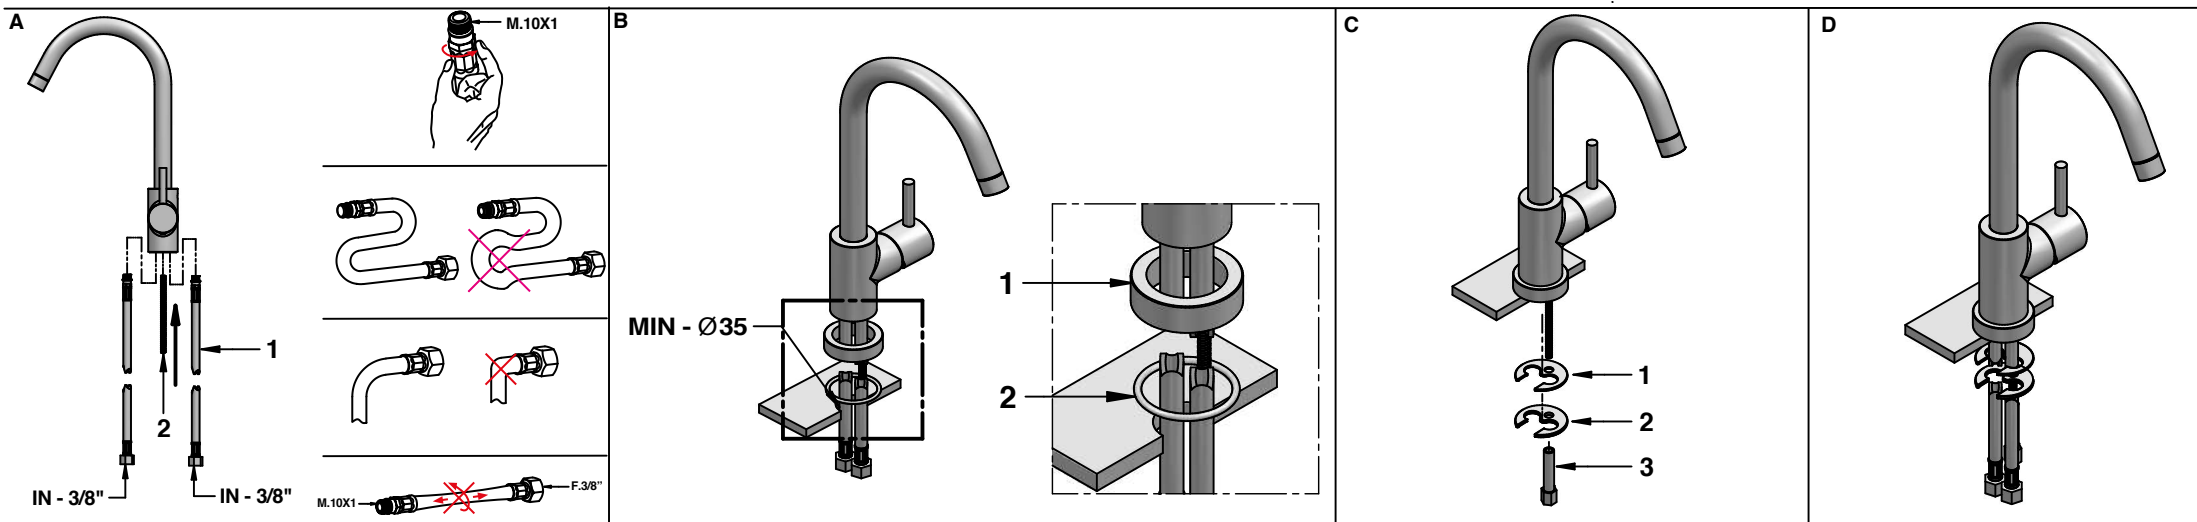


Cod-32580
Cod-32583

Cod-32581


Cod- 32582

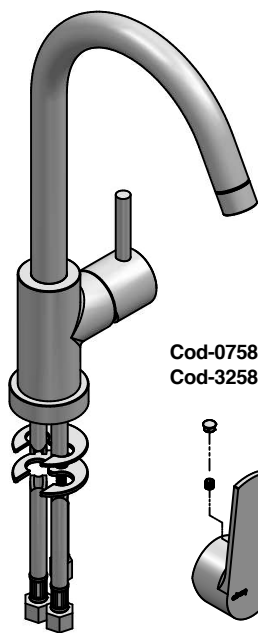

Cod-07580/PR
Cod-32583/PR

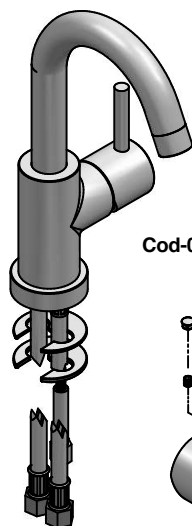


Cod-07581/PR

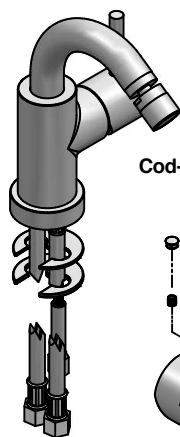


Cod-07581/PR

SOSTITUZIONE AERATORE- REPLACEMENT AERATOR - 580-81-83

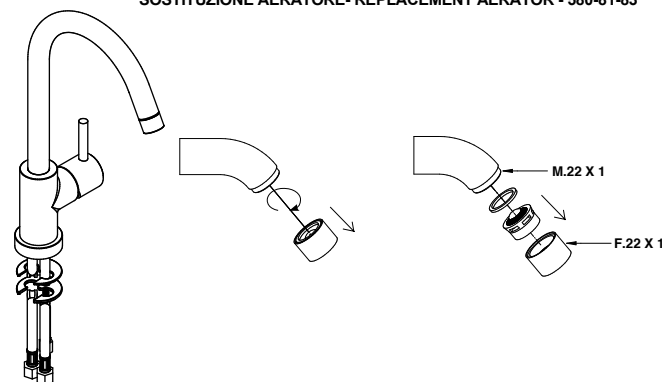

SOSTITUZIONE AERATORE- REPLACEMENT AERATOR - 582

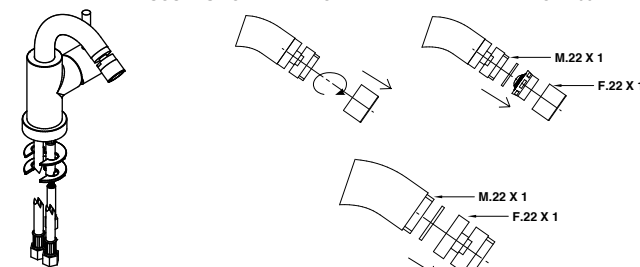

PRESSIONE MINIMA DI SERVIZIO :0,5 bar
PRESSIONE DI SERVIZIO MASSIMA :5 bar
PRESSIONE D'USO CONSIGLIATA :3 bar
TEMPERATURA ACQUA CALDA MAX : 80°C
TEMPERATURA ACQUA CALDA CONSIGLIATA :60°C

In caso di pressione d'esercizio superiore a 5 bar è consigliabile installare un riduttore di pressione sulle tubature di alimentazione.

MINIMUM WORKING PRESSURE:.....0,5 bar
MAX OPERATING PRESSURE :5 bar
RECOMMENDED OPERATION PRESSURE :3 bar
MAX HOT WATER TEMPERATURE :80°C
RECOMMENDED HOT WATER TEMPERATURE :60°C

In case of operating pressures higher than 5 bar it is recommended to install a pressure reducer on the feeding tubes.

bongio

Mario Bongio s.r.l.

Via Aldo Moro, 2

28017 San Maurizio d'Opaglio (NO) - Italy

tel: +39 0322 967248 fax: +39 0322 950012

www.bongio.com - info@bongio.it

Istruzioni montaggio
Per Art- 583-581-582

Installation Instruction
For intem - 583-581-582