

INSTRUCTION

for replacement of spare parts due to leakage in taps Freddo 9,10 and 11

Step 1.

Take off the part from the complete tap. Turn to the left to unscrew the part



Step 2.

Remove the different parts from the part that you have unscrewed. The part that is white on this picture is in real black and it is the main part that takes care of the sealing of the tap. (It is mostly the cause of the dripping).



Step 3.

First, you have to put in the black O-ring into the unscrewed part. This Black O-ring is from now on available as a spare part.



Step 4.

Put in the brass waterbreaker into the unscrewed part.



Step 5.

Put the white (in some case it can be a black part) sealing in the open part of the waterbreaker. From now on this part is available as a spare part.



Step 6.

Please put al together and screw the unscrewed part to the rest of the tap.

