



BUDDY
SPOM 705

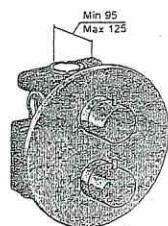


B009 - B013

BLOKE

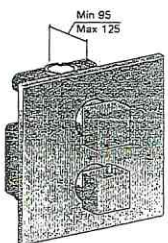



Q009

INSTALLATION

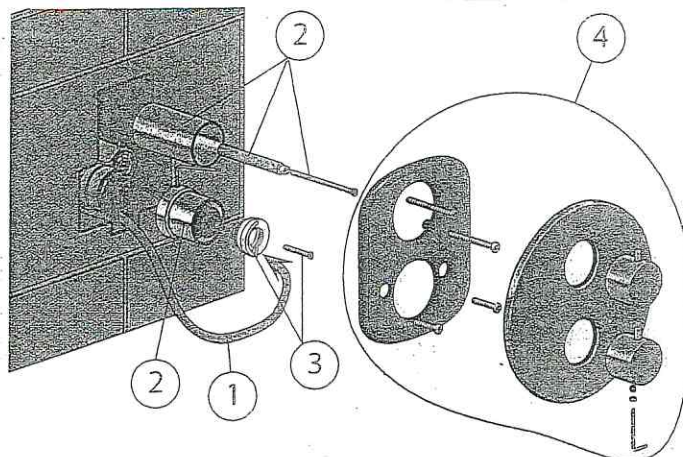


- 1 Remove stop ring / Enlever bague d'arrêt / Stop-Ring ausziehen / Rimuovere anello di stop / Demonteer stop ring
- 2 Install extension kit / Installer kit de rallonge / Verlängerung Bausatz einsetzen / Montare elemento di prolunga / Monteer verlengset
- 3 Insert stop ring and tighten nut / Insérer bague d'arrêt et serrer vis / Stop-Ring einsetzen und Schraube umdrehen / Inserire anello di stop e serrare vite / Monteer stop ring en draai de schroef aan
- 4 Install trim parts / Installer parties extérieures / AP-Teile installieren / Montare parti esterne / Plaats de afbouwdelen terug

BUDDY

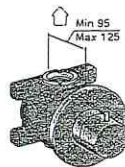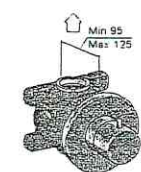



B012

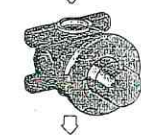




B007

B010

SPOM 706

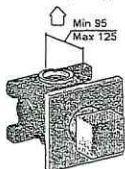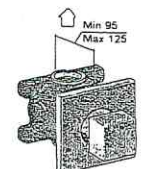


Q012

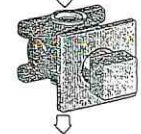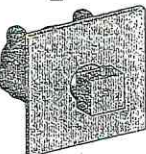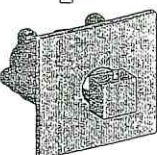

Q007


Q010

INSTALLATION

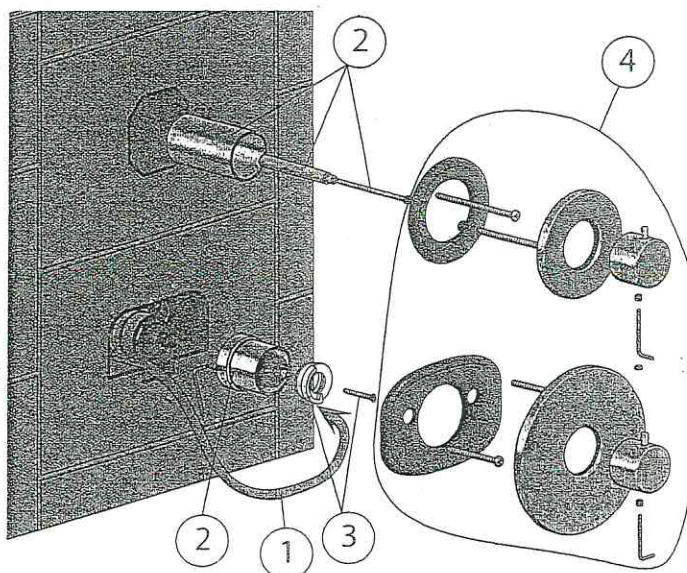


- 1 Remove stop ring / Enlever bague d'arrêt / Stop-Ring ausziehen / Rimuovere anello di stop / Demonteer stop ring
- 2 Install extension kit / Installer kit de rallonge / Verlängerung Bausatz einsetzen / Montare elemento di prolunga / Monteer verlengset
- 3 Insert stop ring and tighten nut / Insérer bague d'arrêt et serrer vis / Stop-Ring einsetzen und Schraube umdrehen / Inserire anello di stop e serrare vite / Monteer stop ring en draai de schroef aan
- 4 Install trim parts / Installer parties extérieures / AP-Teile installieren / Montare parti esterne / Plaats de afbouwdelen terug

SPOM 705
CHAP

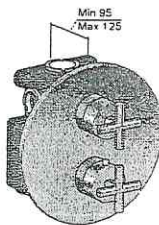


INSTALLATION

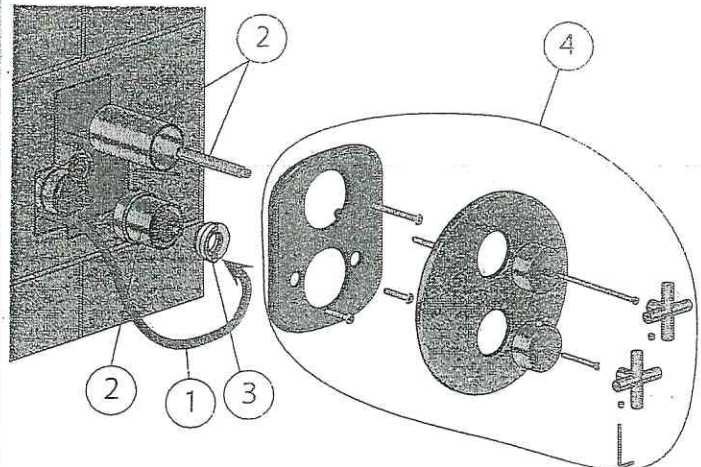


1. Remove stop ring / *Enlever bague d'arrêt* / Stop-Ring ausziehen / *Demonteer stop ring*
2. Install extension kit / *Installer kit de rallonge* / Verlängerung Bausatz einsetzen / *Monteer verlengset*
3. Insert stop ring / *Insérer bague d'arrêt* / Stop Ring einsetzen / *Monteren stop ring*
4. Install trim parts / *Installer parties de finition* / AP-Teile installieren / *Plaats de afbouwdelen terug*

C009

SPOM 706
CHAP

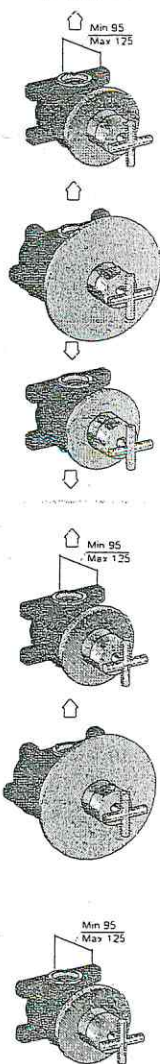

INSTALLATION

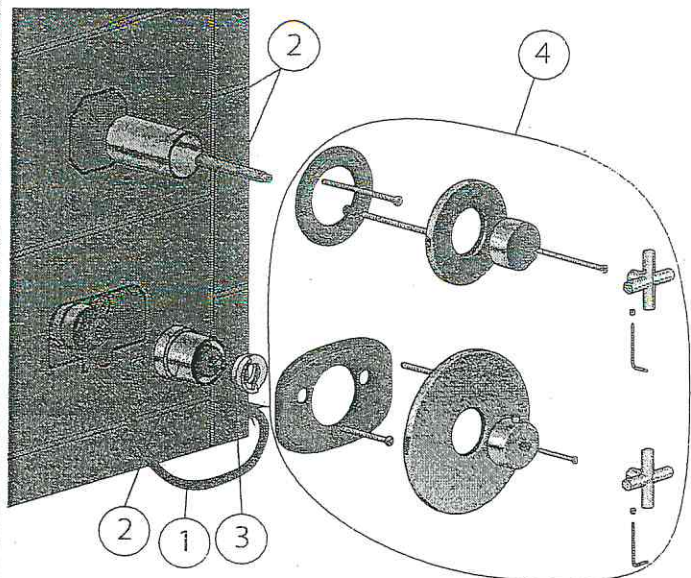

1. Remove stop ring / *Enlever bague d'arrêt* / Stop-Ring ausziehen / *Demonteer stop ring*
2. Install extension kit / *Installer kit de rallonge* / Verlängerung Bausatz einsetzen / *Monteer verlengset*
3. Insert stop ring / *Insérer bague d'arrêt* / Stop Ring einsetzen / *Monteren stop ring*
4. Install trim parts / *Installer parties de finition* / AP-Teile installieren / *Plaats de afbouwdelen terug*

C007

C012

C010