


Installation For Extension Kit


-ONE-

Extension Kit For Thermostatic Valve

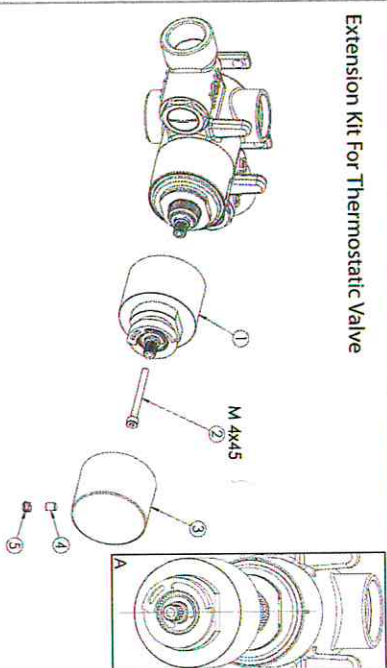


1. Insert the extension (1) over the broach of the cartridge. As showed in the picture (A).
2. Fit the screw mm4x45 (2).
3. Place the regulation knob (3).
4. Fit the grub screw (4).
5. Fit the cap (5).

Extension Kit For Diverter

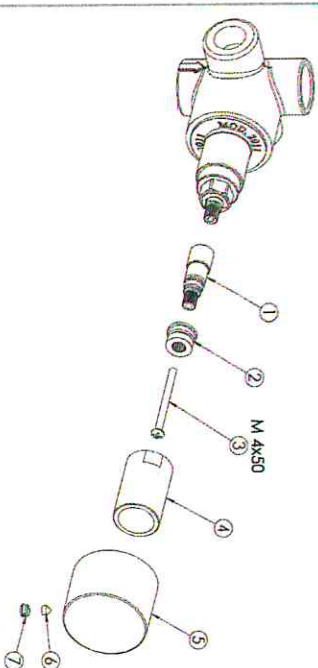

1. Insert the extension rod (1) on the broach of the diverter.
2. Insert the brass bush (2).
3. Fit the screw mm4x50 (3).
4. Screw the short adapter (4) on the thread of the diverter.
5. Place the closure knob (5) and fix it with the grub screw (6).
6. Fit the cap (7).

Extension Kit For Shut Off

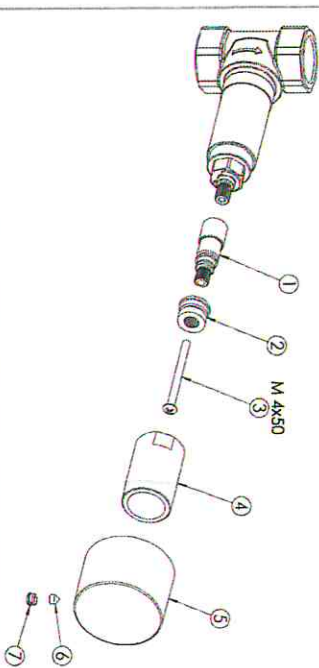

1. Insert the extension rod (1) on the broach of the diverter.
2. Insert the brass bush (2).
3. Fit the screw mm4x50 (3).
4. Screw the short adapter (4) on the thread of the shut off.
5. Place the closure knob (5) and fix it with the grub screw (6).
6. Fit the cap (7).

M 4x45


SCALE 1:1



Installation For Extension Kit


-CORALLO-

Extension Kit For Thermostatic Valve

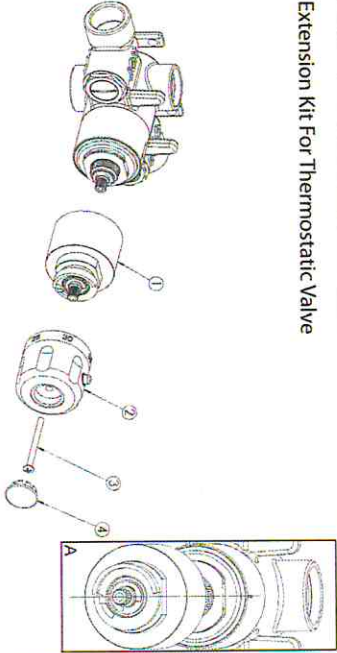


1. Insert the extension (1) over the broach of the cartridge. As showed in the picture (A).
2. Place the regulation knob (2).
3. Fit the screw mm4x50 (3).
4. Fit the cap (4).

Extension Kit For Diverter

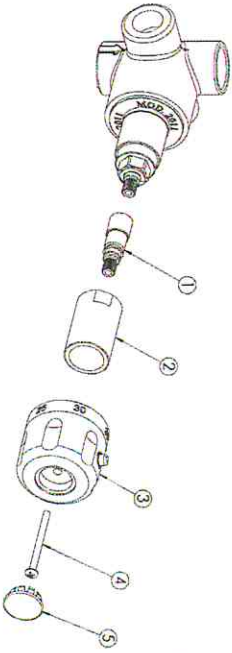

1. Insert the extension rod (1) on the broach of the diverter.
2. Screw the short adapter (2) on the thread of the diverter.
3. Place the closure knob (3).
4. Fit the screw mm4x50 (4).
5. Fit the cap (5).

Extension Kit For Shut Off

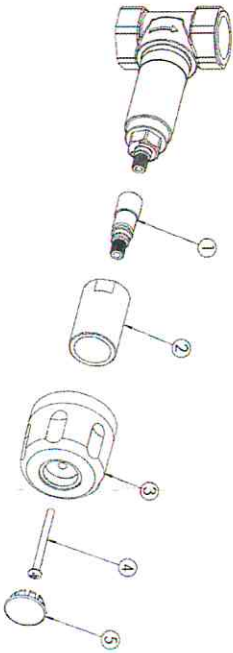

1. Insert the extension rod (1) on the broach of the shut off.
2. Screw the short adapter (2) on the thread of the shut off.
3. Place the closure knob (3).
4. Fit the screw mm4x50 (4).
5. Fit the cap (5).

M 4x50


SCALE 1:1



Installation For Extension Kit


-EXSS-

Extension Kit For Thermostatic Valve

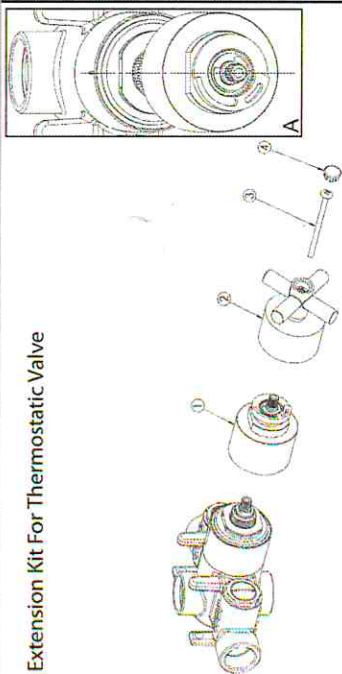


1. Insert the extension (1) over the broach of the cartridge. As showed in the picture (A).
2. Place the regulation knob (2).
3. Fit the screw mm4x70 (3).
4. Fit the cap (4).

Extension Kit For Diverter

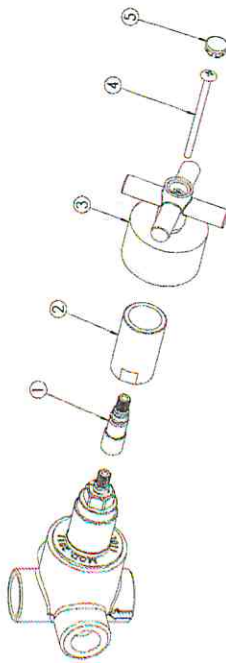

1. Insert the extension rod (1) on the broach of the diverter.
2. Screw the short adapter (2) on the thread of the diverter.
3. Place the closure knob (3).
4. Fit the screw mm4x70 (4).
5. Fit the cap (5).

Extension Kit For Shut Off

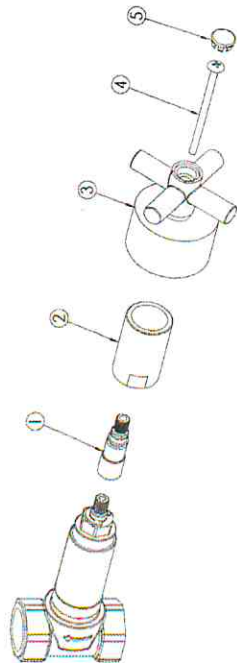

1. Insert the extension rod (1) on the broach of the shut off.
2. Screw the short adapter (2) on the thread of the shut off.
3. Place the closure knob (3).
4. Fit the screw mm4x70 (4).
5. Fit the cap (5).

M 4x70




SCALE 1:1

Installation For Extension Kit


-MINIMAL CROSS-

Extension Kit For Thermostatic Valve

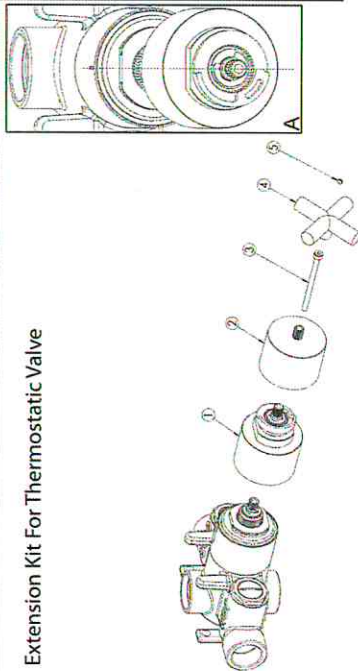


1. Insert the extension (1) over the broach of the cartridge. As showed in the picture (A).
2. Place the regulation knob (2).
3. Fit the screw mm4x70 (3).
4. Fit the cross (4) and fix it with the grub screw (5).

Extension Kit For Diverter

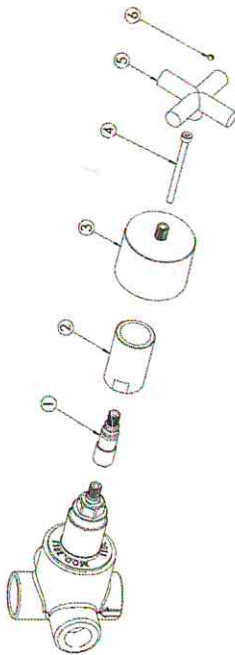

1. Insert the extension rod (1) on the broach of the diverter.
2. Screw the short adapter (2) on the thread of the diverter.
3. Place the closure knob (3).
4. Fit the screw mm4x70 (4).
5. Fit the cross (5) and fix it with the grub screw (6).

Extension Kit For Shut Off

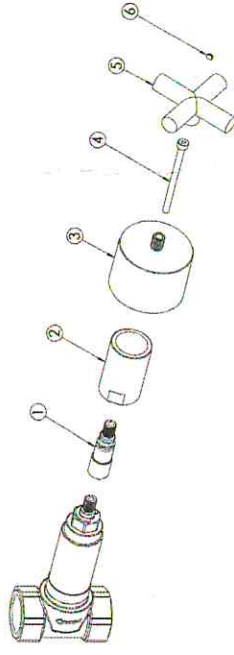

1. Insert the extension rod (1) on the broach of the shut off.
2. Screw the short adapter (2) on the thread of the shut off.
3. Place the closure knob (3).
4. Fit the screw mm4x70 (4).
5. Fit the cross (5) and fix it with the grub screw (6).

M 4x60



SCALE 1:1